

MANN-FILTER


Product Information

No. 94
20.03.2013

Installation instruction for MANN-FILTER C 16 134/1

Fitted in Ford Focus/C-Max/Kuga and Volvo Cars C 30 up to V 50.


Changing air filter C 16 134/1 is simple, so long as a couple of points are observed on installation:

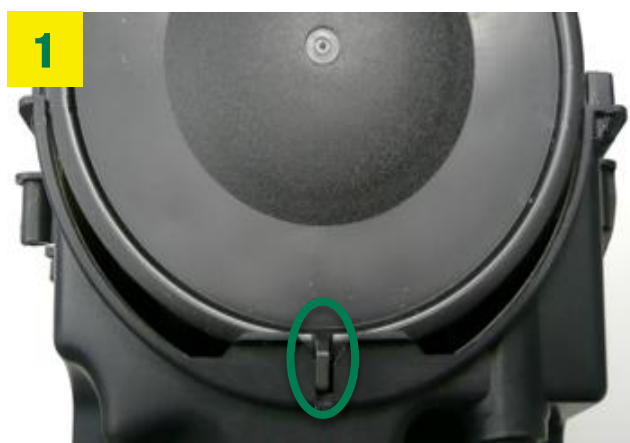

When inserting the filter element, ensure that the alignment contour is correctly placed into the notch provided.



Ensure that the edge of the element base completely fits into the groove of the housing.

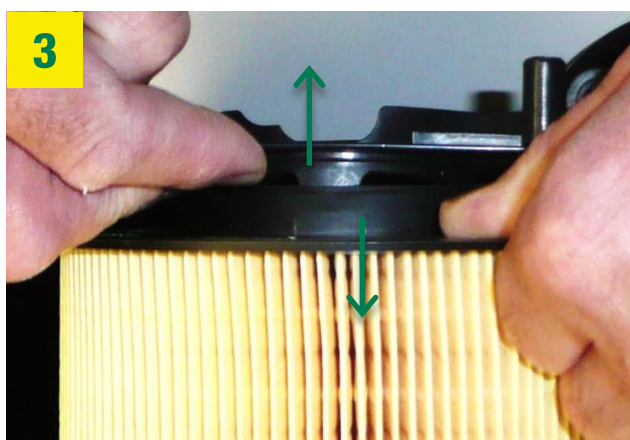

Pull the housing wall away from the element and at the same time pull the element in the opposite direction. Press the flexible seal over the lip of the housing.



The element seal has to be situated behind the housing lip.

